



Part of the TVL Group

TVL Security



Product

ProtektaPlate: Universal Fitting Guide (Use with care)

Installation Guide ↗

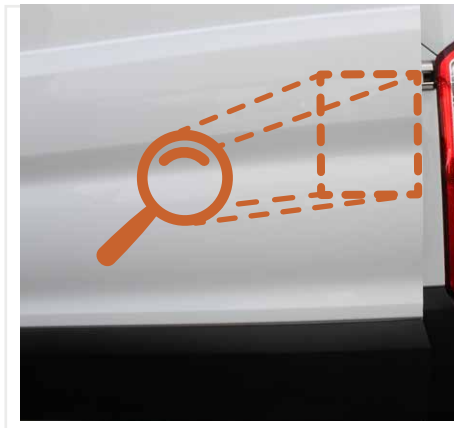


Fig. 1



Fig. 2

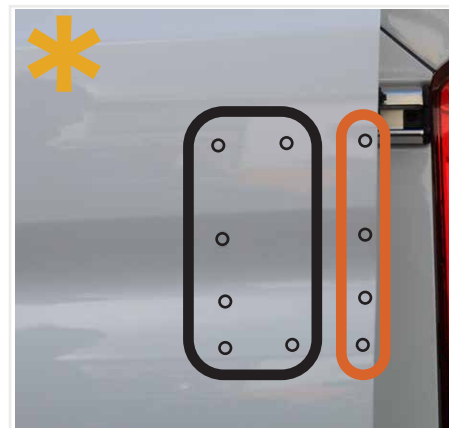


Fig. 3

 **M6 Nylock Nuts**
(If required)
(Uses M6x12 Washers)

 **M6 Serrated Nuts**



Fig. 4



Fig. 5

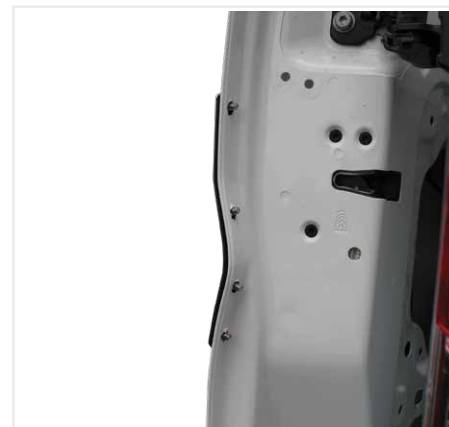



Fig. 6



Fig. 7

This guide is to be used with caution, please check alignment before drilling any holes. If in doubt please speak to our technical support team using the details at the bottom of the page.

 **Ensure door is open when drilling edge holes**

Instructions

- Locate door/position of ProtektaPlate [Fig. 1].
- Offer gasket up into position. Mark the holes on the gasket [Fig. 2 & 3].
- Drill the holes to 8mm. Take care to not drill through mechanism. Paint the inside to prevent rusting [Fig. 4].
- Place the studded external plate through the holes and fit on the interior plate with the supplied M6 nuts.


Ensure if Nylock nuts are supplied they go on outer edge [Fig. 5 & 6].

- Peel off protective film. Installation complete [Fig. 7].

Kit contents:

- [A] Internal Plate x1
- [B] External Plate x1
- [C] Plate Gasket x1
- [D] M6 Nylock Nuts*
- [E] M6x12 Washers*
- [F] M6 Serrated Nuts

*= Nylock nuts are not always required

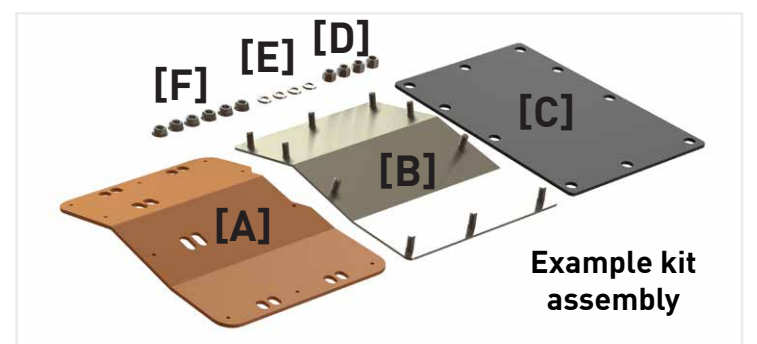

Web:
www.tvl-ltd.co.uk

Phone:
+44 (0) 333 444 6600

Email:
Support@tvl-ltd.co.uk

Whilst we have prepared these instructions with integrity, care and believe all information to be true, these are supplied for guidance only. The installer should check and confirm measurements prior to drilling or cutting. We reserve the right to change, and or update these instructions without notice. This specification is the intellectual property of TVL Group.

For more detailed instructions, follow the QR code to our video guide.

A scannable QR Code will be here in vehicle-specific fitting guides.